

# Default GRBL settings

Each actuator combination needs individual settings to be fine tuned. Below settings are for:

- **RSB1** connected to X axis
- **LSA1** connected to Y axis

GRBL settings for fastest speed under light load:

```
$0=6
$1=255
$2=0
$3=31
$4=1
$5=0
$6=0
$10=19
$11=0.010
$12=0.002
$13=0
$20=0
$21=0
$22=1
$23=15
$24=50.000
$25=200.000
$26=250
$27=5.000
$30=1000
$31=0
$32=0
$100=111.110
$101=5039.370
$102=111.110
$103=111.110
$110=20000.000
$111=2000.000
$112=20000.000
```

\$113=20000.000

\$120=2000.000

\$121=100.000

\$122=2000.000

\$123=2000.000

\$130=360.000

\$131=90.00

\$132=360.000

\$133=360.000

---

Revision #3

Created 31 August 2020 13:23:57 by Saulius

Updated 1 September 2020 15:27:09 by Saulius